 








## Inner Lower Cowl



## Right Lower Cowl


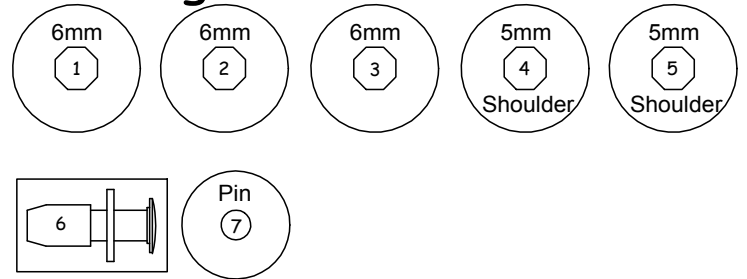


## Left Lower Cowl

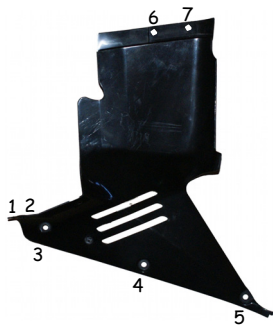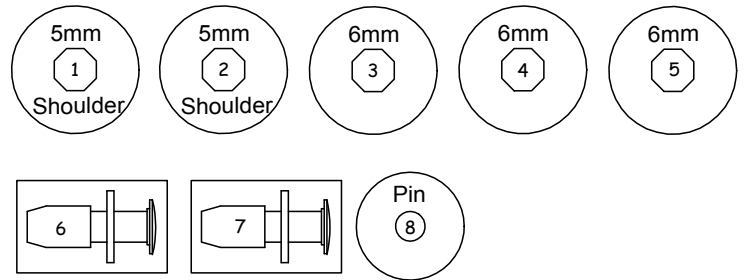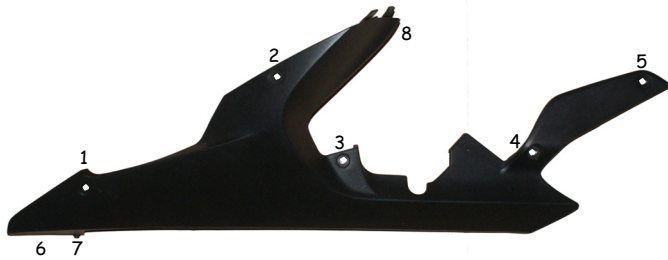


## Right Inner Cowl

Unplug or remove sensor

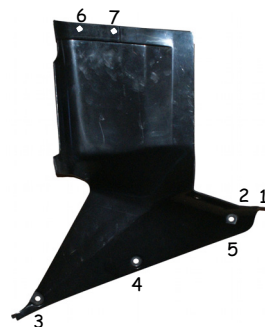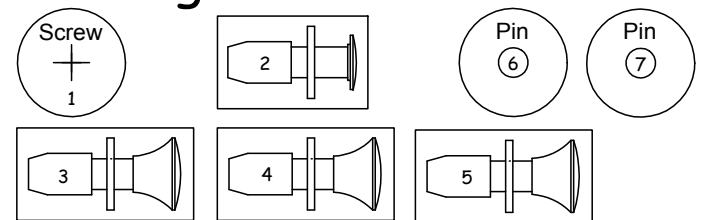

## Left Inner Cowl

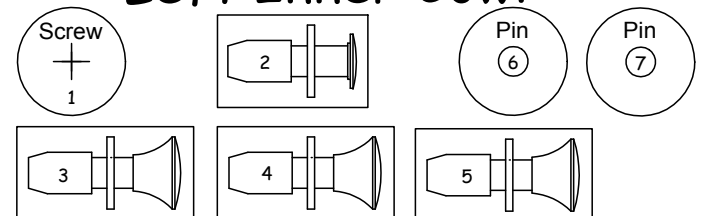

## Engine Guard Covers

